



Knowing what's up!

e l e r o

Sun Shading Solutions Nice


Status LED display

of the ProLine 2 transmitter

Colour and frequency	Meaning
Flashing Orange (2 Hz)	Channel is empty or not yet programmed
Flickering Orange (20 Hz)	Channel is in bidirectional programming mode (at least one bidirectional receiver is also in programming mode)
Orange and then green	Channel is bidirectionally programmed and the receiver has received the signal.
Orange and then red	Channel is bidirectionally programmed and one of the receivers has not received the signal
Red and then green	Channel is bidirectionally programmed and the receiver has received the signal. Batteries are low!
Red and then red	Channel is bidirectionally programmed and one of the receivers has not received the signal. Batteries are low!
Green	Channel is in unidirectional mode
Orange and green alternating, then red	Channel (transmitter) is deleted
Red flashing	Batteries are very low!



Explanation of the push buttons on the example of the LumeroCom

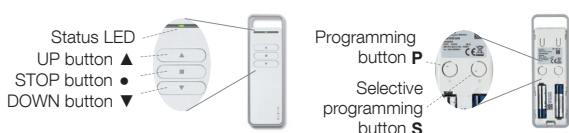

Explanation of the push buttons on the example of the LumeroTel 2



ProLine 2

Bidirectional transmitter programming

Function	Button combination	Procedure	Condition/ prerequisite
1 Start learning readiness mode (time: 5 min.)	Interrupt supply voltage: Switch circuit breaker off/on, if there are no programmed transmitters		
	▲ + ▼ + P	approx. 3 sec.	Transmitter already programmed
Start (synchronous) learning readiness mode (time: 5 min.)	▼ then P	approx. 3 sec. -> LED lights up orange	Transmitter already programmed
2 Start programming mode (progr. time: 2 min.)	P	Press for approx 1 sec. on the transmitter to be programmed until LED lights up orange	Receiver is in learning readiness mode
Start selective programming mode * (progr. time: 2 min.)	S	By pressing several times (approx. 1 sec. each time) on the transmitter to be learnt, it can be selected between the receivers one after the other	Receiver is in learning readiness mode
3 Programme transmitter	▲ then ▼	Press the UP button immediately after the start of the „upward movement“ (< 1 sec.) and the DOWN button briefly after the start of the „downward movement“. The drive stops	Drive is in programming mode / the blind constantly drives UP and DOWN for a short distance!
Stop programming mode (in receiver only)	●	Tap	Transmitter already programmed
Stop (synchronous) programming mode (in transmitter + receiver)	●	Press for approx. 6 sec. (until LED flashes orange)	Programming mode was started with this transmitter
Delete an individual transmitter / channel from the receiver	P + ●	approx. 6 sec. -> LED lights up red	Transmitter already programmed
Delete EVERYTHING from the receiver with subsequent learning readiness	▲ + ● + ▼ + P	approx. 6 sec. -> LED lights up red	Transmitter already programmed
Programme intermediate position in the receiver	▼ then ●	Press and hold the DOWN button until the desired position is reached, then <u>additionally</u> press the STOP button briefly	Transmitter already programmed
Delete intermediate position from the receiver	● + ▼	simultaneously approx. 3 sec. -> LED goes off briefly	Transmitter already programmed
Drive to intermediate position	2 x ▼	Quickly push DOWN button 2x	Intermediate position already programmed
Programme ventilation or tilting position in the receiver	▲ then ●	Press and hold the UP button until the desired position is reached, then <u>additionally</u> press the STOP button briefly	Transmitter already programmed
Delete ventilation or tilting position from receiver	● + ▲	simultaneously approx. 3 sec. -> LED goes off briefly	Transmitter already programmed
Drive to tilting position	2 x ▲	Quickly push UP button 2x	Tilt position already programmed

* Device-dependent, if S button is available